



## UR2M-B32 快速安裝導引

### 產品示意圖與配件表

前視圖

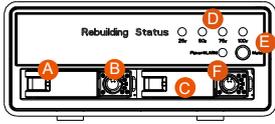

背視圖

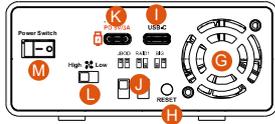

- A** 硬碟 LED 指示燈
- B** 硬碟托盤彈出按鈕
- C** 硬碟托盤把手
- D** 資料重建狀態 LED 指示燈
- E** 靜音鍵
- F** 電源/警示 LED 指示燈
- G** 風扇
- H** 重設按鈕
- I** USB Type-C 埠 (20Gbps)
- J** RAID 模式開關
- K** USB Type-C PD 電源埠
- L** 風扇轉速控制開關
- M** 電源開關

包裝內容物：

- UR2M-B32 x1
- 快速安裝導引 x1
- 螺絲與硬碟托盤頂針
- USB3.2 Type-C to Type-C 線 (黑色) x1
- USB3.2 Type-C to Type-C 線 (白色) x1 (僅供DC電源使用)


請注意：

- 請檢查產品和所有隨附附件是否有損傷或缺失零件。如果您遇到任何問題，請聯絡您的產品供應商。
- 如需更多資訊、資源和下載相關資料，請造訪 STARDOM 官方網站 [www.STARDOM.com.tw](http://www.STARDOM.com.tw)。




v0.2 (Feb. 2026)

2. 打開上蓋：打開上蓋。

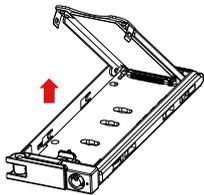


3. 安裝 M.2 NVMe SSD：插入一個 M.2 NVMe SSD 並用螺絲固定。

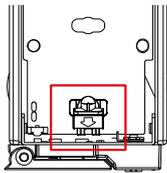

4. 裝回上蓋：將上蓋裝回。


5. 插入硬碟托盤：將硬碟托盤滑回 UR2M。

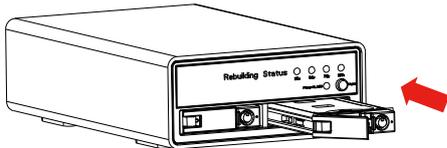

6. 連接電纜：使用隨附的 USB 線連接 UR2M 和 PC/Mac。黑色 USB 線用於資料傳輸，白色 USB 線用於直流電源。
7. 開機：開啟系統電源；作業系統應該自動偵測磁碟。
8. 格式化磁碟：如有必要，請依照作業系統提示格式化磁碟。

如何調整門鎖位置

按下門鎖並旋轉 90 度即可取下。移至適當位置後，反向操作即可固定門鎖。

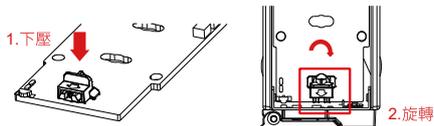

請注意：

- 請在啟動 UR2M 之前將 UR2M 連接到 PC/Mac (開機狀態)，否則 UR2M 將處於睡眠模式。

### LED 燈號說明

狀態	硬碟 LED 燈狀態			電源/警示 LED 燈	蜂鳴器
	RAID 1	Big	JBOD		
DC 電源充足	----	----	----	藍燈恆亮	----
DC 電源不足	----	----	----	紅燈恆亮	----
硬碟開置	藍燈恆亮	藍燈恆亮	藍燈恆亮	----	----
資料存取中	藍燈閃爍	藍燈閃爍	藍燈閃爍	----	----
無硬碟或硬碟故障	----	----	----	紅燈閃爍 (JBOD 模式下不閃爍)	嗚叫 (JBOD 模式下不嗚叫)
RAID 1 降級 (來源碟)	紫燈閃爍	----	----	紅燈閃爍	嗚叫
資料重建中 (來源碟)	藍燈閃爍	----	----	----	----
資料重建中 (目標碟)	紫燈閃爍	----	----	----	----
溫度過高 (60°C)	----	----	----	紅燈閃爍	嗚叫
風扇故障	----	----	----	紅燈閃爍	嗚叫

進度	資料重建狀態 LED 燈			
	25%	50%	75%	100%
< 25%	藍燈閃爍	----	----	----
< 50%	藍燈恆亮	藍燈閃爍	----	----
< 75%	藍燈恆亮	藍燈恆亮	藍燈閃爍	----
< 100%	藍燈恆亮	藍燈恆亮	藍燈恆亮	藍燈閃爍
100%	藍燈恆亮	藍燈恆亮	藍燈恆亮	藍燈恆亮
完成	四顆 LED 燈同時閃爍 3 秒後熄滅			


請注意：

- 請使用支援 PD 5V/3A 的電源或將 UR2M 連接到 Thunderbolt™ 3/4/5 主機以獲得足夠的電力。
- 紅色電源 LED 亮起時，請勿開啟電源開關。

### 硬體安裝


請參照下列步驟安裝 UR2M：

1. 打開硬碟托盤：使用包裝隨附的鑰匙解鎖硬碟托盤，將托盤彈出按鈕向右推，然後將硬碟托盤拉出。

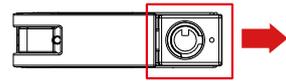

### RAID 模式切換

變更 RAID 模式 (預設值是 JBOD)

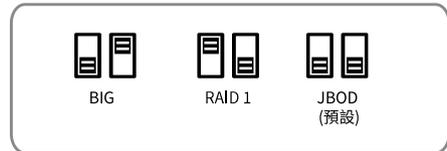

1. 將 UR2M 連接到 PC/Mac  
依照硬體安裝將 UR2M 連接到 PC/Mac 並開啟 PC/Mac。
2. 選擇 RAID 模式  
透過變更 RAID 模式開關選擇您想要使用的 RAID 模式。
3. 按下重置按鈕  
使用頂針按下重設按鈕。
4. 開機  
開啟 UR2M 並持續按住重設按鈕 5 秒鐘。一旦 RAID 模式改變，磁碟 LED 將會閃爍。然後您可以釋放重置按鈕。
5. 切換完成  
UR2M 會自動重新開啟。之後您就可以在所選的 RAID 模式下使用 UR2M。

### 使用前注意事項

1. 使用正確的 USB 線 - 黑色 USB 線用於資料傳輸，白色 USB 線用於直流電源。
2. 備份資料 - 確保所有重要文件都有備份。
3. 接地 - 透過接地防止靜電釋放。
4. 拔掉電源 - 安裝前關閉電腦並拔掉電源插頭。
5. 使用無靜電表面 - 避免在地毯或導電表面上工作。
6. 閱讀說明 - 開始之前檢查所有步驟。
7. 安全移除 - 在關閉 UR2M 或移除 USB 連接之前，請務必透過作業系統安全移除 UR2M。

感謝您選擇 STARDOM 產品！


請注意，本手冊中的資訊在出版時是正確的，但產品規格在出貨前可能已變更。有關最新規格與更新，請造訪 [www.STARDOM.com.tw](http://www.STARDOM.com.tw) 或聯絡您的經銷商。

如果您對 STARDOM 產品有任何疑問，或是要取得最新的產品手冊或軟體更新，請發送電子郵件到 [supporting@raidontek.com](mailto:supporting@raidontek.com)


## Quick Installation Guide for UR2M-B32

### Product Diagrams and Package Contents

Front View

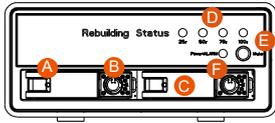

Rear View

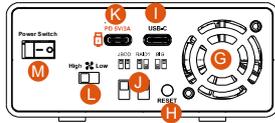

- A** Disk LED
- B** Disk Tray Ejection Button
- C** Disk Tray Handle
- D** Rebuilding Status LED
- E** Mute Button
- F** Power / Alarm LED
- G** Fan
- H** Reset Button
- I** USB-C Port (20Gbps)
- J** RAID Mode Switch
- K** USB-C Port for Power Delivery
- L** Fan Speed Adjust Switch
- M** Power Switch

**Package Contents:**


- UR2M-B32 x1
- Quick Installation Guide x1
- USB3.2 Type-C to Type-C Cable (Black) x1
- USB3.2 Type-C to Type-C Cable (White) x1 (For DC Power Supply Only)
- Screws & Eject pins

**Please Note:**


- Check the product and all included accessories for defects or missing parts. If you encounter any issues, contact your product supplier.
- For additional information, resources, and downloads, please visit the STARDOM official website at [www.STARDOM.com.tw](http://www.STARDOM.com.tw)



**2.Open the Top Cover:** Open the top cover from the case.

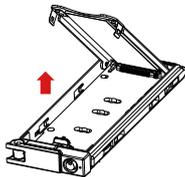

**3.Install M.2 NVMe SSD:** Insert a M.2 NVMe SSD and secure with screw nut.

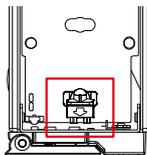

**4.Put the Top Cover Back:** Close the top cover to the case.

**5.Insert the Disk Tray:** Slide the Disk Tray back into the UR2M unit.




**6.Connect the Cables:** Use the included cables to connect the UR2M and PC/Mac. The Black USB cable is for data transmission and the White one is for DC power.

**7.Power On:** Turn on the system; the OS should auto-detect the disk.

**8.Format the Disk:** Follow OS prompts to format the disk if necessary.

**How to adjust the latch position:**

Press the latch and rotate 90 degrees then you can remove it. After moving to the appropriate position, reverse the operation to fix the latch.

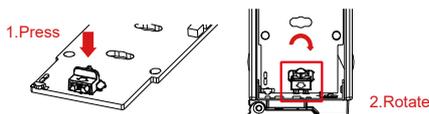

**Please Note:**

- Please connect UR2M to PC/Mac (power on status) before power on UR2M, otherwise UR2M will be on the sleep mode.

### LED Status Guide

Status	Disk LED Status			Power / Alarm LED	Buzzer
	RAID 1	Big	JBOD		
DC Power Sufficient	----	----	----	Blue light always On	----
DC Power Insufficient	----	----	----	Red light always On	----
Disk Idle	Blue light always On	Blue light always On	Blue light always On	----	----
Data Accessing	Blue light Flashing	Blue light Flashing	Blue light Flashing	----	----
No Disk / Disk Failed	----	----	----	Red Light Flashing (JBOD Mode will be Off)	On (JBOD Mode will be Off)
RAID 1 Degrade (Source)	Purple light Flashing	----	----	Red light Flashing	On
Rebuilding (Source)	Blue light Flashing	----	----	----	----
Rebuilding (Target)	Purple light Flashing	----	----	----	----
Over Temp. (60°C)	----	----	----	Red light Flashing	On
Fan Failed	----	----	----	Red light Flashing	On

Progression	Rebuilding Status LED			
	25%	50%	75%	100%
< 25%	Blue light Flashing	----	----	----
< 50%	Blue light always On	Blue light Flashing	----	----
< 75%	Blue light always On	Blue light always On	Blue light Flashing	----
< 100%	Blue light always On	Blue light always On	Blue light always On	Blue light Flashing
100%	Blue light always On	Blue light always On	Blue light always On	Blue light always On
Finished	All LED Flashing for 3 seconds and then turns off			


**Please Note:**

- Please use the adapter supports PD 5V/3A or connect UR2 to Thunderbolt™ 3/4/5 host to get sufficient power.
- Do not turn on the power switch if the Red power LED lights On.

### Hardware Installation


**Installing the UR2M**

- 1.Open the Disk Tray:** Use the key, press the tray ejection button to the right, and pull the tray out.

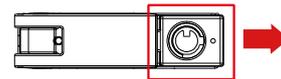

### RAID Mode Change

**Change the RAID Mode:** (The default RAID mode is JBOD)

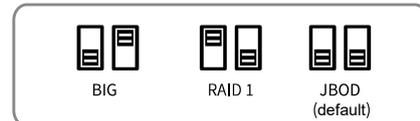

**1.Connect the UR2M to PC/Mac**

Follow the hardware installation to connect the UR2M to PC/Mac and turn on the PC/Mac.

**2.Select the RAID Mode**

Select the RAID Mode you want to use by change the RAID Mode switch.

**3.Press the Reset Button**

Use the Eject Pin to press the Reset button.

**4.Power On**

Turn on the UR2M and keep pressing the Reset button for 5 seconds. The disk LED will be flashing once the RAID mode is changed. Then you can release the Reset button.

**5.RAID Mode Changed**

UR2M will turn off the power and on again automatically. Then you can use the UR2M in the RAID mode selected.

### Precautions Before Use

- 1.Use Correct USB Cable** –The Black USB cable is for data transmission and the White one is for DC power.
- 2.Backup Data** – Ensure you have a backup of all important files.
- 3.Ground Yourself** – Prevent static discharge by grounding yourself.
- 4.Unplug Power** – Turn off and unplug your computer before installation.
- 5.Use a Static-Free Surface** – Avoid working on carpets or conductive surfaces.
- 6.Read Instructions** – Review all steps before starting.
- 7.Safely Remove** – Always safely removed UR2M through the operating system before turning it off or remove the USB connection.

Thank you for choosing STARDOM products!

Please note that the information in this manual was accurate at the time of publication, but product specifications may have changed prior to shipping. For the latest specifications and updates, visit [www.STARDOM.com.tw](http://www.STARDOM.com.tw) or contact your sales representative.

For any inquiries about STARDOM products, or to receive the latest product manuals or firmware updates, please email us at: [supporting@raidontek.com](mailto:supporting@raidontek.com).